

INSTALLATION SHEET

Phone: 0508 966 378
Email: sales@soteriadoors.co.nz
soteriadoors.co.nz



Specification Name:

Infernoguard Fire & Smoke Rated Lift Shaft Door – Steel Jamb

Specification Code	Fire Resistance Rating (FRR)	Wall Requirement
IF60LDT	-/60/-sm	Timber Stud Ex 100x50 with 13mm fire rated plasterboard to each side of wall to manufacturer's installation instructions
IF30LDT	-/30/-sm	
IFSMLDT	-/-/-sm	

Required Fixings:

- Door Jamb to wall - Screws 8g x 75/100mm
- Bugle Head Screws - 14g x 100mm

Installation Checklist:


- Installer Declaration received. Declaration form is to be completed and returned before fire door certification tags can be issued. Send declaration to infernoguard@soteriadoors.co.nz
- Check all hardware and specified fixings are available. Fire doors are to have door closers and a self-latching or locking system. All hardware must comply with Soteria approved hardware. If unsure, check with Soteria or approved hardware guide on our website www.soteriadoors.co.nz

Fixing of Doorset:

1. Ensure prepared opening is both square and plumb.
2. Check the opening is within the recommended trim size. (Overall door & frame width + 15mm, Overall door & frame height + 5mm).
3. Place the doorset into the prepared opening.
4. Fix back the hinge jamb to the stud using supplied fixings.
5. Wedge/pack and fix back the closing jamb.
6. Ensure the doorset is square in the opening and opens and shuts freely.
7. Line wall with plasterboard to manufacturer's specifications.
8. Install Gib Fire/Sound Seal as shown in drawing.
9. Complete and sign installer fire door declaration sheets and return promptly to Soteria Doors.

Wall Door Elevation

①

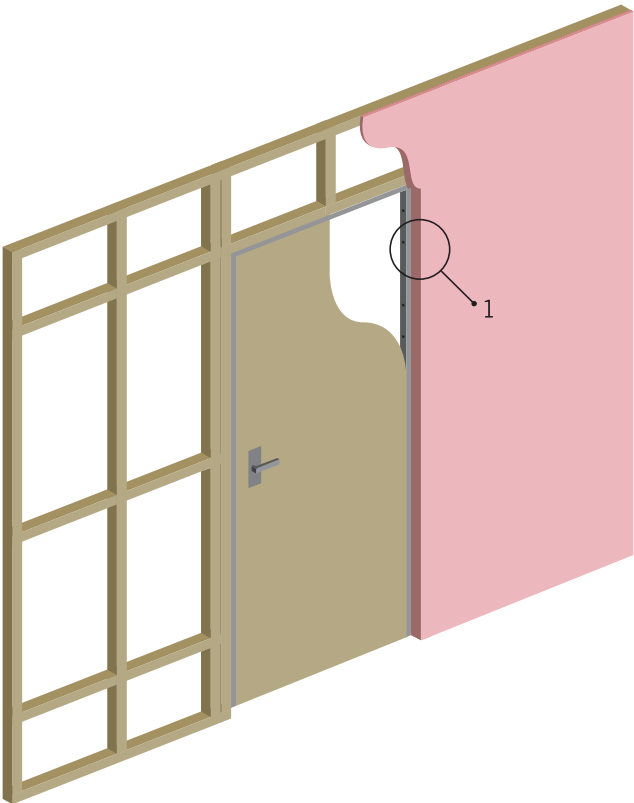

J1 - Wall Junction

①

