

**Specification Name:**

## Infernoguard® 60 Minute Fire Rated – Steel Stud Jamb Types: Timber Jamb

Specification Code	Fire Resistance Rating (FRR)	Wall Requirement
IF60HPS IF60HSS	-/60/60sm	Minimum 92x60x0.7 steel studs with 13mm fyreline plasterboard to each side to manufacturer's installation instructions.

**Required Fixings:**

- Door Jamb to wall - Wood Screws 10g x 75mm or 75mm Jolt head screws
- Doorstop - Nails 32mm long
- Architrave - Nails 40-50mm long
- Infernoguard Mastic
- Infernoguard Rokstop (if wedging gaps are over 10mm)
- PEF Backing Rod
- Timber Wedges/Packers

**Installation Checklist:**


- Installer Declaration received. Declaration form is to be completed and returned before fire door certification tags can be issued. Send declaration to sales@soteriadoors.co.nz
- Check all hardware and specified fixings are available. Fire doors are to have door closers and a self-latching or locking system. All hardware must comply with Soteria approved hardware. If unsure, check with Soteria or approved hardware guide on our website [www.soteriadoors.co.nz](http://www.soteriadoors.co.nz)

**Fixing of Doorset:**

1. Ensure prepared opening is both square and plumb.
2. Check the opening is within the recommended trim size. (Overall door & frame width + 15mm, Overall door & frame height + 5mm)
3. Remove the doorstop from the doorset.
4. Place the doorset into the prepared opening.
5. Wedge/pack gap between back of jamb and framing. Minimum = Direct Fix, Maximum 10mm gap. Pre-drill holes for fixings.
6. Fix back the hinge jamb to the stud.
7. Wedge/pack and fix back the closing jamb as per step 4 & 5. Max 10mm gap. (Note: Wedging Gaps up to 30mm have been successfully tested. Special details including Infernoguard® Rokstop packing required)
8. No fixing is required on the head jamb of single doors. Fix double doors at the head at the mid-point.
9. Ensure the doorset is square in the opening and opens and shuts freely.
10. Reposition the doorstop and fix in the required position allowing tolerance of 5-6mm between door stop and face of the door.
11. Install PEF backing rods to perimeter of the wall/door interface as per drawings below.
12. Install Infernoguard® mastic to the perimeter of wall/door interface to the depth/thickness as per below.
13. Fit architraves to door. Architraves are optional when fitting into masonry walls.
14. Fit perimeter seals to doorstop.
15. Complete and sign installer fire door declaration sheets and return promptly to Soteria Doors.

## Wall Door Elevation

①

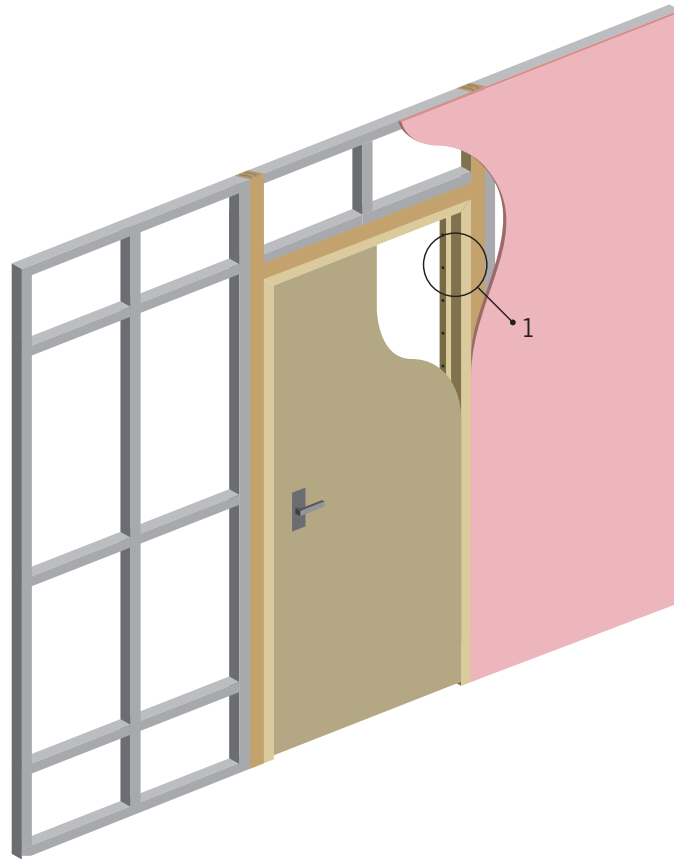

## J1 - Wall Junction

①

