

INSTALLATION SHEET

Phone: 0508 966 378
Email: sales@soteriadoors.co.nz
soteriadoors.co.nz



Specification Name:

Infernoguard Fire & Smoke Rated Lift Door – Steel Jamb

Specification Code	Fire Resistance Rating (FRR)	Wall Requirement
IF60LDT	-/60/-sm	Timber Stud Ex 92x45 with 13mm fire rated plasterboard to each side of wall to manufacturer's installation instructions
IF30LDT	-/30/-sm	
IFSMLDT	-/-/-sm	

Required Fixings:

- Door Jamb to wall - Screws 8g x 30mm

Installation Checklist:


- Installer Declaration received. Declaration form is to be completed and returned before fire door certification tags can be issued. Send declaration to infernoguard@soteriadoors.co.nz
- Check all hardware and specified fixings are available. Fire doors are to have door closers and a self-latching or locking system. All hardware must comply with Soteria approved hardware. If unsure, check with Soteria or approved hardware guide on our website www.soteriadoors.co.nz

Fixing of Doorset:

1. Ensure prepared opening is both square and plumb.
2. Check the opening is within the recommended trim size. (Overall door & frame width + 15mm, Overall door & frame height + 5mm).
3. Place the doorset into the prepared opening.
4. Fix back the hinge jamb to the stud.
5. Wedge/pack and fix back the closing jamb.
6. Ensure the doorset is square in the opening and opens and shuts freely.
7. Install Gib Fire/Sund Seal as shown in drawing.
8. Complete and sign installer fire door declaration sheets and return promptly to Soteria Doors.

Wall Door Elevation

①

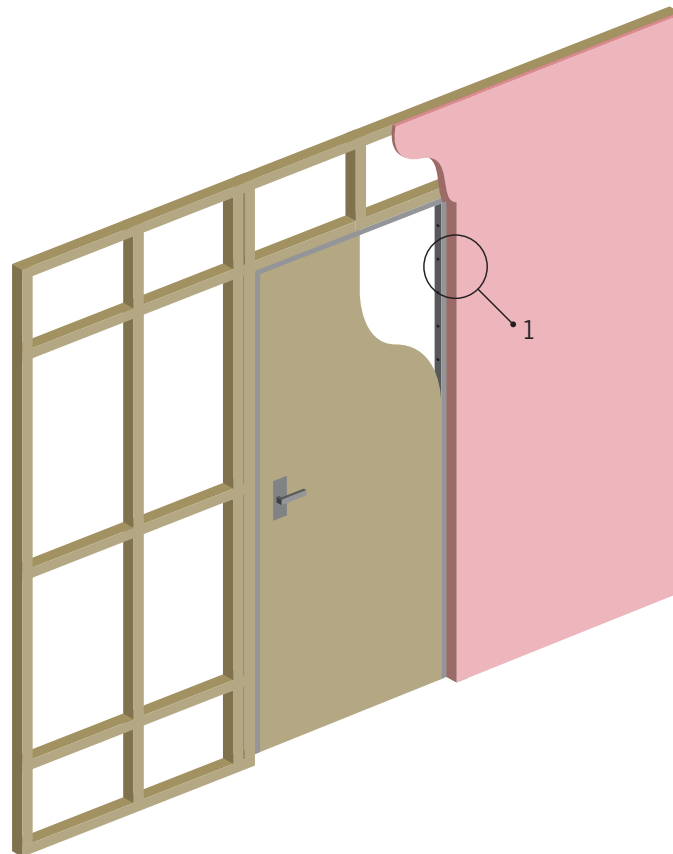

J1 - Wall Junction

①

